
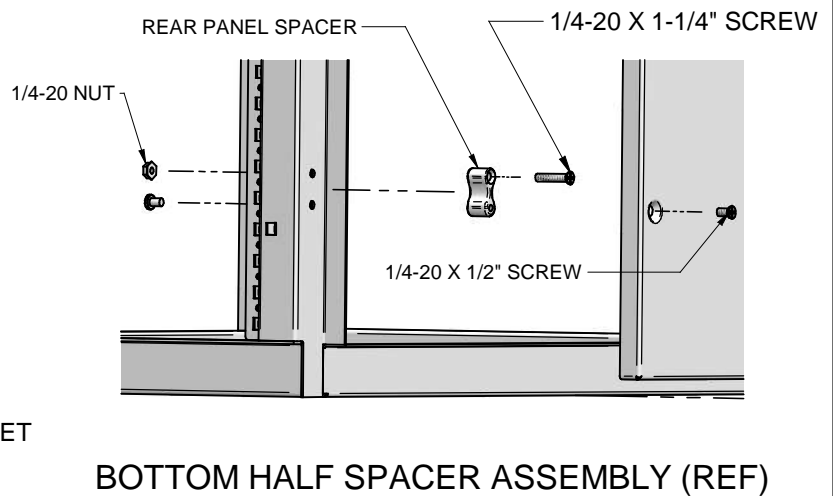
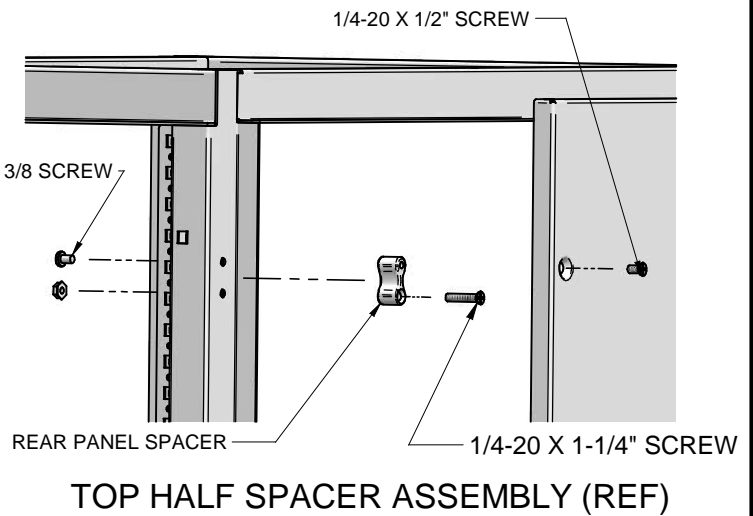


# HMEC - SERIES

BUL86263

REV. B

## ASSEMBLY INSTRUCTIONS FOR HMEC - HME REAR COVER

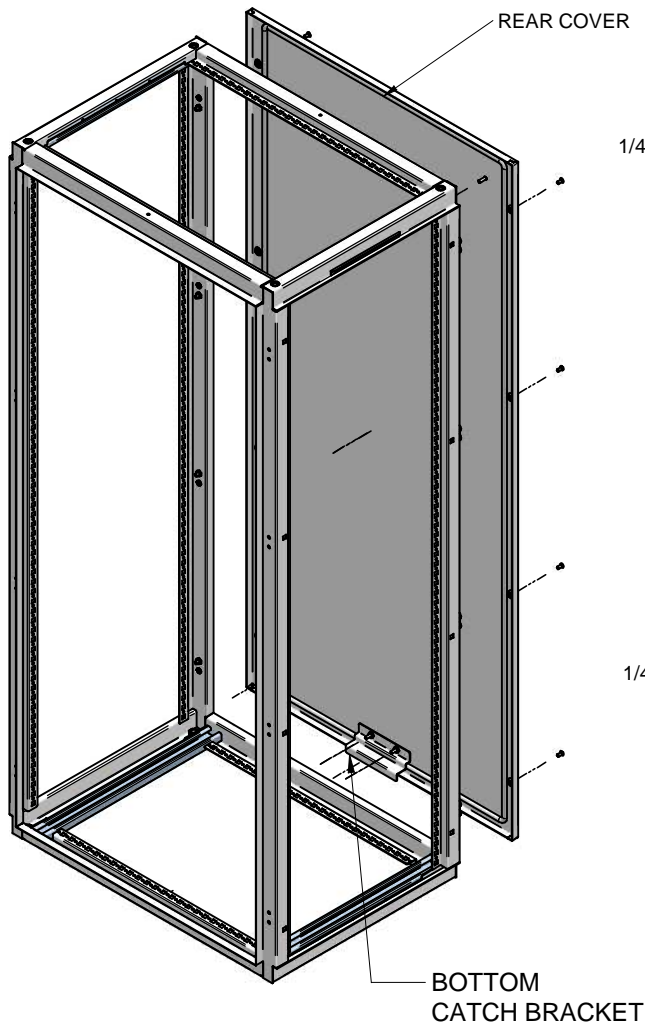


### REMOVAL INSTRUCTIONS:

- A) Using a phillips screwdriver, unscrew the 1/4-20 X 1/2" screw.
- B) Remove rear panel.

### INSTALLATION INSTRUCTIONS:

- A) Rest bottom catch bracket on frame.
- B) Align holes to rear panel spacer
- D) Using a philips screw driver install and tighten 1/4-20 X 1/2" screws.

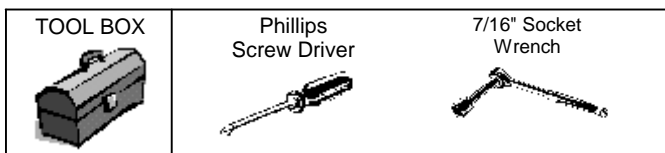

 **HAMMOND  
MANUFACTURING™**  
www.hammondmfg.com